

# Qadvanced Roller Shade Multi-Channel Remote GEN3 Programming Instructions




## ⚠ IMPORTANT ⚠

### Read and understand each section before performing required steps

During **FIRST TIME SETUP** after **Step 3. TUG**, a remote must be paired to the shade within 60 seconds. Otherwise, the shade will time-out and require a Special Learn Command (Pg. 1) to pair a new remote. JOG is a short up and down movement. Channel number is indicated on the remote by a single green LED. The “ALL” channel (red LED is illuminated) follows Channel 7 in the selection sequence. Shade will only respond to learned channel, or “ALL” channel.

### FIRST TIMESETUP

- 1. INSTALL SHADE** following appropriate instructions
- 2. PRESS** and **RELEASE** the **CHANNEL** button to select a channel (1-6)
- 3. TUG** the **HEMBAR 6-10 inches** (Shade will JOG in response)
- Use a paperclip to **PRESS** the **PROGRAM** button on the back of the remote (The Channel LEDs will scroll up and down when in program mode)
- 5. PRESS** and **RELEASE** the **UP** button (Shade will JOG, move to Upper Limit Position, then JOG again)

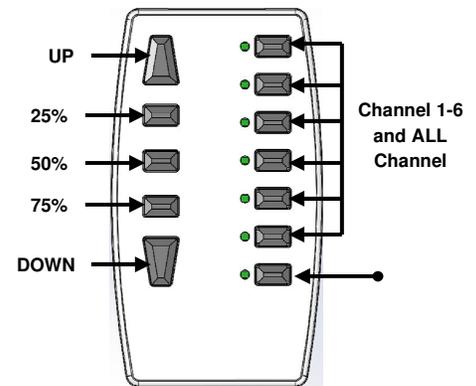

GEN3 Multi-Channel Remote

### SETTING LOWER LIMIT

- 1. PRESS** and **RELEASE** the **DOWN** button (Shade will move to current Lower Limit Position)
- 2. PRESS** and **HOLD** the **DOWN** button until shade **JOGS**
- 3. TUG** the **HEMBAR 6-10 inches** (Shade will JOG in response)
- 4. ADJUST** shade to desired Lower Limit (The DOWN button is disabled while setting the Lower Limit, adjust by pressing the UP button or manually roll shade by hand)
- 5. PRESS** and **HOLD** the **DOWN** button until shade **JOGS**


### Use Special Learn Command when:

- The shade times-out without being paired to a remote.
- A paired remote is not being used or available
- Adding a second remote to the shade

### SPECIAL LEARN COMMAND

(Shade at Upper Limit Position - manually roll shade up by hand if necessary)

- Use a paperclip to **PRESS** the **PROGRAM** button on the back of the remote (The channel LEDs will scroll up and down when in program mode)
- 2. PRESS** and **HOLD** the **ALL CHANNEL** button until the shade moves
- 3. TUG** the **HEMBAR 6-10 inches** (The shade will JOG in response)
- Use a paperclip to **PRESS** the **PROGRAM** button on the back of the remote (The channel LEDs will scroll up and down when in program mode)
- 5. PRESS** and **RELEASE** the **UP** button (Shade will JOG, move to Upper Limit Position, then JOG again)

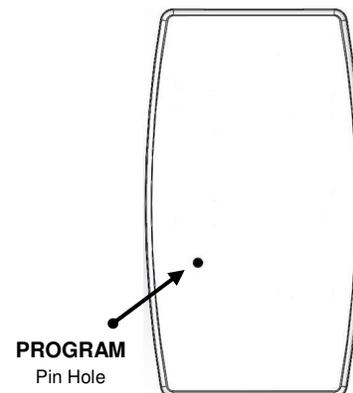

Remote Back

 **IMPORTANT** 

Lower Limit Position must be set prior to using the **PRESET** positions (**25%, 50%, 75%**). These positions are based on the Lower Limit Position of the shade. When learning new positions, the button currently being programmed (after Step 3. TUG) will not send commands to the shade. After Step 5 all buttons resume full functionality.

**Example 1:** When learning a new Upper Limit Position, the **UP** button is semi-disable. Only by pressing the **UP** button **3** times will the shade move to the up position (or manually roll the shade up by hand).

**Example 2:** When learning a new Lower Limit Position, the **DOWN** button is disabled. The shade can still be adjusted using the **UP** button (or manually roll the shade by hand).

### SETTING UPPER AND LOWER LIMITS / LEARNING A NEW POSITION

1. **PRESS** and **RELEASE** the (**UP, DOWN, or PRESET**) button that will be programmed  
(Shade will move to selected position)
2. **PRESS** and **HOLD** the same (**UP, DOWN, or PRESET**) button **UNTIL** the shade **JOGS**
3. **TUG** shade **6-10 inches** (Shade will JOG in response)
4. **ADJUST** shade to desired position (Manually roll shade by hand if necessary)
5. **PRESS** and **HOLD** the same (**UP, DOWN, or PRESET**) button (Shade will JOG when learned)

### DELETE / UNLEARN A REMOTE (or Channel)

(Shade at Upper Limit)

1. **PRESS** and **RELEASE** the **CHANNEL** button to select the channel currently paired to the shade  
(Skip channel selection for Single-Channel Remotes)
2. Use a paperclip to **PRESS** the **PROGRAM** button on back of the remote  
(The channel LEDs will scroll up and down when in program mode)
3. **PRESS** and **HOLD** the **UP** button until Shade moves downward
4. **TUG** the shade **6-10 inches** (Shade will JOG in response)
5. Use a paperclip to **PRESS** the **PROGRAM** button on back of the remote  
(The channel LEDs will scroll up and down when in program mode)
6. **PRESS** the **DOWN** button  
(Shade will JOG, move to Upper Limit Position, then JOG again)

 **IMPORTANT** 

When unrolling the shade to expose battery cover, the shade will try to roll upward. Hold the **FABRIC ROLL TUBE** firmly in place to resist the initial upward movement, then continue to unroll the **FABRIC ROLL TUBE** to expose battery cover.

### SHADE BATTERY REPLACEMENT

1. **PRESS** and **RELEASE** the **DOWN** button (Shade will move to Lower Limit Position)
2. **UNROLL** the **FABRIC ROLL TUBE** to expose the battery cover (See **IMPORTANT** information above)
3. **REMOVE** battery cover and **REPLACE** with new **NEW D-CELL** Alkaline batteries
4. **REPLACE** battery cover (Shade will now respond to remote commands)
5. **PRESS** and **RELEASE** the **UP** button to roll fabric back onto the tube

### FACTORY (MASTER) RESET (Will remove **ALL** paired remotes)

(Shade at Upper Limit Position)

1. Use a paperclip to **PRESS** the **PROGRAM** button on back of the remote  
(The channel LEDs will scroll up and down when in program mode)
2. **PRESS** and **HOLD** the **DOWN** button **UNTIL** the shade moves downward (Tug shade within 15 seconds)
3. **TUG** the shade **6-10 inches** (Shade will JOG in response)

### REMOTE BATTERY REPLACEMENT

1. Remove bottom cover and replace with same (CR2032) coin cell battery and properly dispose battery.