

QADVANCED WITH INTEGRATED TORSION SYSTEM INSTALLATION INSTRUCTIONS

IMPORTANT

Read and understand all instructions before installing. Always wear personal protection equipment including safety glasses and gloves. Use a ladder per its manufacturer's instructions. Work safely!

The QMOTION 2 with integrated torsion system utilizes a factory installed upper limit stop. This gives the installer the freedom to mount the shade standard roll or reverse roll without the need for external stops.

TO MOUNT THE SHADE

1. Install the brackets per instructions.
2. Remove the shade from the packaging.
3. Mount the torsion system side first. The torsion system side can be identified by the "remove with extreme caution" label on the end.
4. The hem bar upper limit stop is factory set, orient the hem bar accordingly.

NOTE:


1. When properly installed the mounting shaft will be in the vertical position in the bracket when fully installed.
2. In a reverse roll mount, the position that the hem bar hangs is determined by the upper limit stop.
3. In a standard roll mount, the position that the hem bar hangs is also determined by the upper limit stop.





Standard
Roll Direction




Reverse
Roll Direction

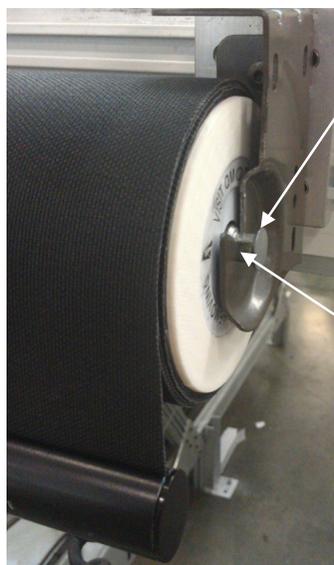


Mounting Shaft

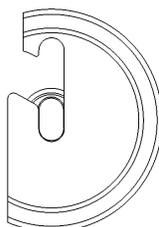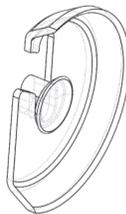


Vertical

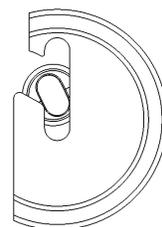

Not vertical

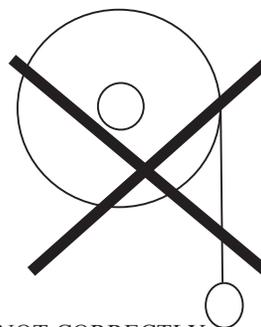

NOT CORRECTLY
POSITIONED

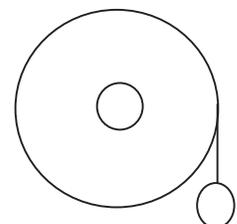

CORRECTLY
POSITIONED